

## 6. MIDI Controller C1-xMP1 not detected (Controller not connected)

### Mac:

If the C1-xMP1 does **not** show up in the System Report > USB, see [\*\*here\*\*](#)

### Windows:

If the C1-xMP1 does **not** show up in the Device Manager, see [\*\*here\*\*](#)

---

Revision #1

Created 26 April 2025 06:07:58 by Admin

Updated 26 April 2025 08:38:31 by Admin