

6. MIDI Controller C1-xMP1 not detected (Controller not connected)

Mac:

If the C1-xMP1 does **not** show up in the System Report > USB, see [here](#)

Windows:

If the C1-xMP1 does **not** show up in the Device Manager, see [here](#)

Revision #2

Created 26 April 2025 06:07:58 by Admin

Updated 29 November 2025 12:42:45 by Admin